

USB Medical Keyboards and Mice



Easy and quick to disinfect, Maximum typing comfort

Purekeys manufactures easy to disinfect keyboards and mice for use in all medical environments.

All Purekeys medical keyboards combine a completely flat top with the tactile feedback of a normal keyboard. The flat top surface is made of a high grade silicone rubber and can be cleaned with any hospital grade disinfectant. With cleaning time less than 5 seconds, best practice to clean between patients can be easily achieved.

Advantages:

- ❑ Flat surface that is easy to clean and disinfect between patients
- ❑ The Purekeys keyboard has a dedicated Clean Key that allows to disable input when cleaning
- ❑ Can be cleaned with all hospital grade disinfectants
- ❑ Tactile feedback of a normal keyboard
- ❑ Plug and Play compatible with all Windows-based PC's
- ❑ White color has a fresh and clean look




100% flat surface: easy to clean without the need for immersion, no raised surfaces where bacteria can hide

Real scissor type keys with excellent tactile key response

Works with any Microsoft Windows-based PC

Dedicated Clean Key to quickly disable input during cleaning procedures

Silicone based cover, non allergenic, can be cleaned with hospital grade antibacterial fluids

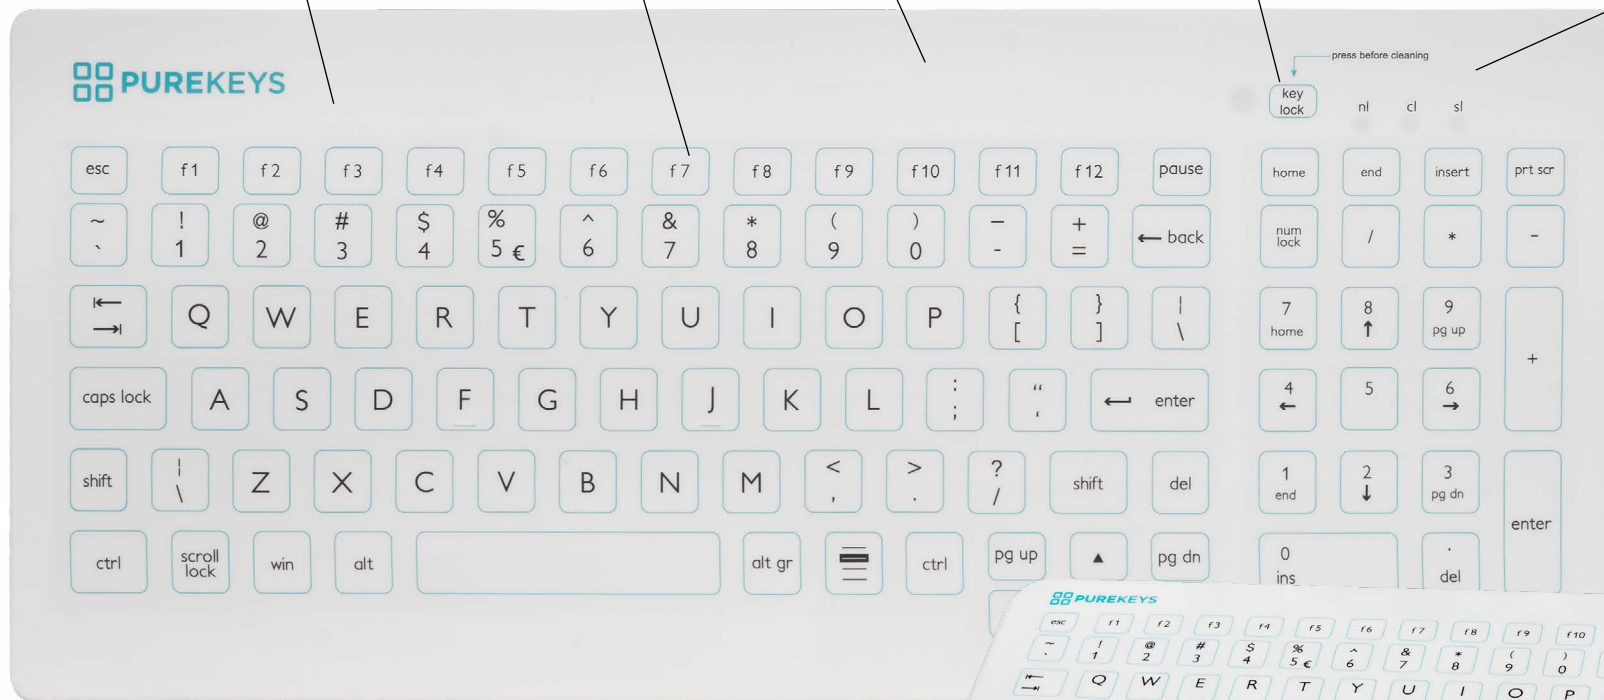

Disinfectable USB Mouse with touch scroll
White art. 40065
Black art. 40265

USB Keyboard art. 400XXX00*

SPECIFICATIONS

300XXX00: L/W/H: 386 x 163 x 20 mm

400XXX00: L/W/H: 377 x 163 x 35 mm

Weight: 850 grams

Working angle 300XXX00: 0 or 6 degrees

adjustable with 6 supplied rubber feet

Working angle 400XXX00: 6 degrees

IP66, can be cleaned with liquid disinfectants

Color: White silicone with black and blue print
Also available in black silicone with white print

Interface: USB / plug and play

cable 300XXX00 165 cm

cable 400XXX00 190 cm

Approvals 300XXX00: CE, FCC, EN60601-1-2

Approvals 400XXX00: CE, FCC

Warranty: 2 year limited warranty

DENTAL SØR AS

Leverer tastaturer med norsk tegnsatt



Saltverket 6, Postboks 901, 4515 Mandal

Tlf 38 27 88 88 - www.dentalnet.no - post@dentalnet.no



USB Keyboard art. 300XXX00*



300XXX00 bottom: 6 rubber feet, 4 x 5mm, 2 x 15mm supplied for different angles + Brass inserts on 75 mm VESA distance