

BWT besttaste




The Improver

FILTER FOR GREAT-TASTING WATER IN CATERING AND VENDING

Raw water has to be optimised for use in catering. BWT besttaste is a filter system that **perfects the odour and flavour** of drinking water for use in hotels, restaurants and catering. The filter system consists of a filter cartridge and a screwed-on BWT besthead filter head. The two backflow prevention devices stop water from flowing back into the drinking water pipeline or filter cartridge while also preventing any accidental leaks.

The main filter stage features granulates made from **special activated charcoal**, which removes chlorine, organic compounds and other substances ('off flavours') from the water that impair its flavour and odour. BWT besttaste gives water and the products it is used in an outstanding set of **high-quality sensory properties**.

The systems from BWT water+more are safe and pressure-resistant food-grade filters that can be utilised in any drinking water system worldwide.

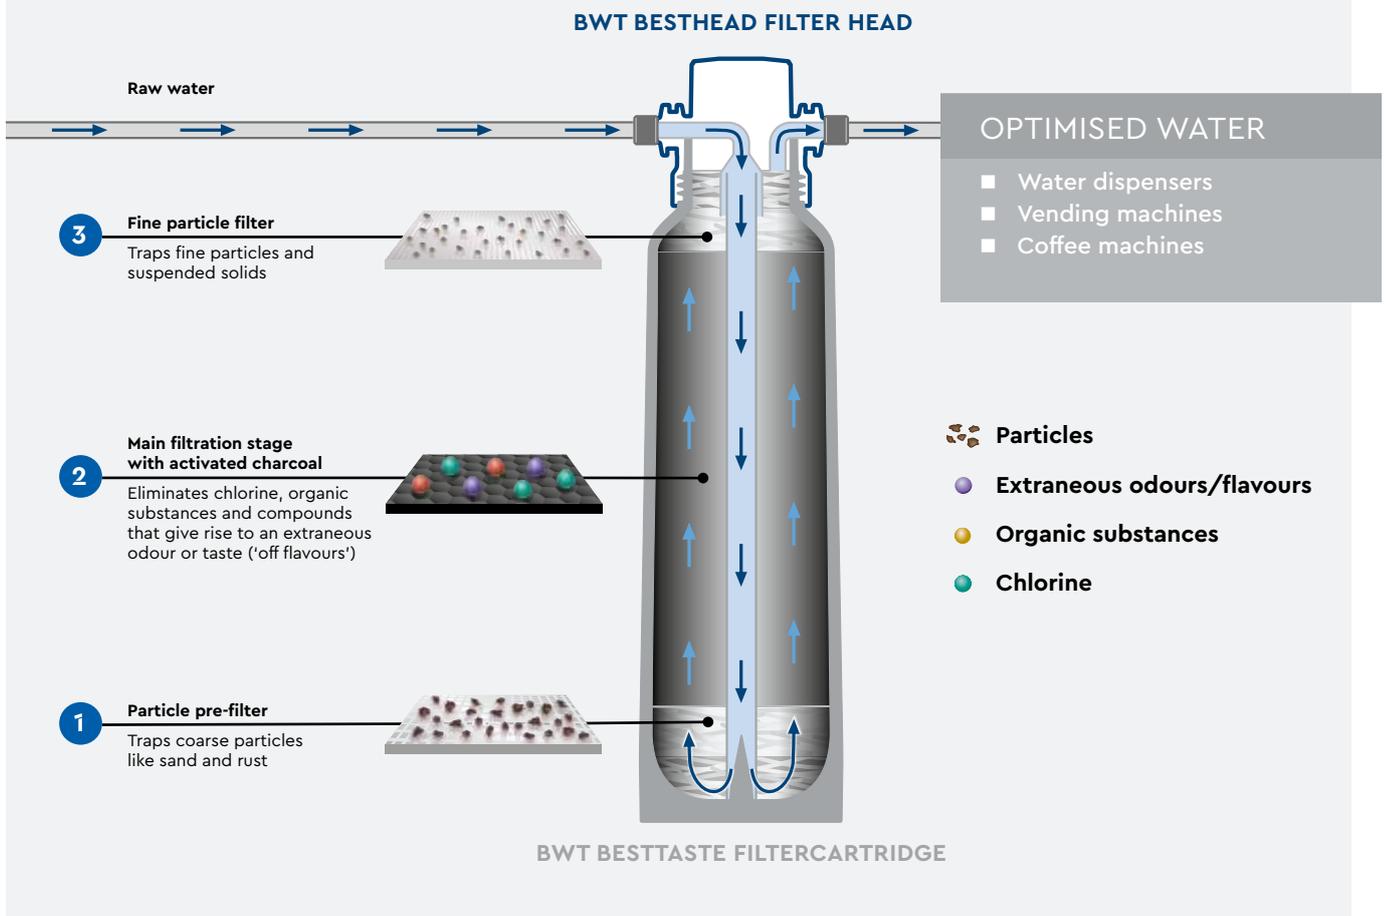


BWT besttaste

TECHNICAL DATA

Filter size	X	S
Typical capacity in litres	10,000	40,000
Height without bracket (B) in mm	280	360
Height with bracket (A) in mm	300	385
Connection height (C) in mm	230	310
Filter cartridge diameter (D) in mm	88	88
Weight in kg (dry/wet)	0.5/1.1	0.9/1.5
Filter cartridge order no.	FS20A00A00	FS22A10A00

Subject to change.

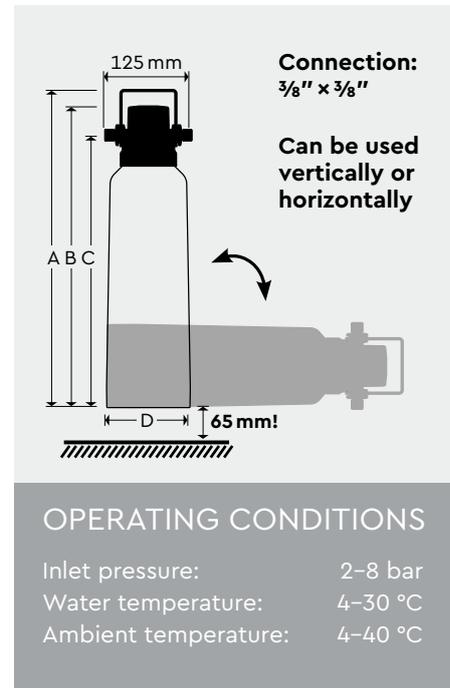

ACCESSORIES

	Connection	Order number
BWT besthead FLEX filter head	BWT besthead FLEX with 2 connectors 90° elbow, FLEX Insert, M 3/8" made from GFP	FS00Z20A00
BWT besthead FLEX Set 1	BWT besthead FLEX with 2 connectors 90° elbow, FLEX Insert, M 3/8" made from GFP, Connection hose DN 8, 1.5 m, with ball valve, FLEX Insert 90° elbow made from GFP, cap nut FM 3/8", Connector straight, FLEX Insert x M 3/8" made from GFP, Reduction FM 3/4" x M 3/8" made from GFP	FS00Z39A00



MANUFACTURER:

BWT water + more GmbH
Walter-Simmer-Str. 4
A-5310 Mondsee

SALES:

BWT water+more Deutschland:
info@water-and-more.de · Tel.: +49 (0)611 58019-0

BWT water + more Austria:
kundenservice.wm@bwt-group.com · Tel.: +43 (0)6232 5011-1164

BWT Aqua AG Schweiz:
info@bwt-aqua.ch · Tel.: +41 (0)61 7558899


BWT
water + more